

BRISA Evaporative Window Cooler Replacement Parts List

BRISA Enfriador Evaporativo de Ventana - Lista Reemplazo de Partes

Item	Replacement Part	Parte de Reemplazo	BW3500A	BW4001	BW4501	BW5001
1	Cabinet Assembly	Ensamble del Gabinete	----	----	----	----
2	Blower Assembly Complete	Ensamble de Soplador	5-3-44	5-3-44	5-3-46	5-3-46
3	Pad Assembly Complete	Ensamble del Filtro Completo	5-2-8	5-2-9	5-2-10	5-2-10
3b	Aspen Pad	Filtro de Aspen (paja)	5-2-216	5-2-218	5-2-217	5-2-217
3c	Pad Retaining Wire	Retenedor de Alambre	5-2-230	5-2-233	5-2-232	5-2-232
4	Pump Receptacle	Receptáculo de Bomba	5-7-94	5-7-126	5-7-126	5-7-126
5	Motor Cord Receptacle	Receptáculo de Motor Cordón	5-7-95	5-7-127	5-7-127	5-7-127
6	Motor Cord	Cordón de Motor	5-7-37	5-7-37	5-7-37	5-7-37
7	Motor Mounting Clamps	Abrazaderas para el Motor	5-7-28	5-7-28	5-7-28	5-7-28
8	Motor Sheave	Polea Motriz	5-3-31	5-3-31	5-3-152	5-3-172
9	Belt	Banda	5-3-17	5-3-17	5-3-18	5-3-18
10	Blower Pulley	Polea Impulsada de Turbina	5-3-59	5-3-59	5-3-58	5-3-58
11	Bearing Assembly (set of 2)	Chumaceras (juego de 2)	5-3-37	5-3-37	5-3-38	5-3-38
12	Shaft	Eje	5-3-1	5-3-1	5-3-2	5-3-2
13	Water Distributor Assy	Distribuidor de Agua	5-6-22	5-6-18	5-6-35	5-6-35
14	Bleed off Tee & Hose	Adaptador de Sangría y Tubo	5-6-3	5-6-3	5-6-3	5-6-3
15	Float Valve Assy	Ensamble Válvula con Flotador	5-6-1	5-6-1	5-6-1	5-6-1
16	Pump Assy w/ basket, 115V	Bomba con Filtro, 115V	5-6-34	5-6-34	5-6-34	5-6-34
17	Standpipe Kit	Juego de Drenaje	5-6-5	5-6-5	5-6-5	5-6-5
18	Motor	Motor	5-7-40	5-7-40	5-7-40	5-7-42
19	Switch Box Assembly	Ensamble de Caja de Interruptor	5-7-99	5-7-125	5-7-125	5-7-125
19a	Switch (High / Off / Low)	Interruptor (Alta/Apagado/Baja)	5-7-93	5-7-93	5-7-93	5-7-93
19b	Switch - Cool (pump)	Interruptor - Cool (bomba)	5-7-92	5-7-92	5-7-92	5-7-92
19c	Power Supply Cord	Cordón de clavija	5-7-90	5-7-90	5-7-90	5-4-90
20	Grille Assembly	Ensamble de Rejilla	5-4-14	5-4-28	5-4-28	5-4-28
21	Duct Assembly	Ensamble del conucto	5-4-13	5-4-33	5-4-33	5-4-33

